

REPLACEMENT CLEATS INSTRUCTIONS

THANK YOU FOR PURCHASING ISSI PEDALS!

At iSSi™, we know the best way to improve a bike is to make it truly your own. That's why we fashion equipment to personalize the connection between you and your bike. iSSi: it's your bike; make it yours.

⚠ WARNING: CYCLING CAN BE DANGEROUS. BICYCLE PRODUCTS SHOULD BE INSTALLED AND SERVICED BY A PROFESSIONAL MECHANIC. NEVER MODIFY YOUR BICYCLE OR ACCESSORIES. READ AND FOLLOW ALL PRODUCT INSTRUCTIONS AND WARNINGS INCLUDING INFORMATION ON THE MANUFACTURER'S WEBSITE. INSPECT YOUR BICYCLE BEFORE EVERY RIDE. ALWAYS WEAR A HELMET.

⚠ WARNING: A loose, cracked, worn out, or crashed pedal can come off of your bicycle crank leading to a loss of control that could cause serious injury. Pedals that are damaged or worn out should not be used. Remove immediately and inspect for damage. If you are unsure if your pedal is safe to ride, consult your local bicycle dealer.

⚠ WARNING: Never ride in open-toed or open-heel shoes as they don't fully support and secure your foot. Doing so could lead to a loss of control and serious injury and/or death.

For additional product and safety information go to: www.rideissi.com/safety.

COMPATIBILITY AND INTENDED USE

iSSi cleats and pedal parts are only designed as replacement parts for iSSi pedals. iSSi cleats are compatible with all standard TW0-bolt SPD shoe drillings. The parts kits and cleats are NOT INTENDED for anything other than direct replacement of parts.

⚠ WARNING: Do not attempt to modify or alter your iSSi pedals or cleats.

TOOLS AND SUPPLIES

4mm Allen wrenches

Grease

INSTALLATION OF THE 2-BOLT CLEAT

1. If there is a cover over the cleat area of the sole, remove the cover from the shoe using a pair of pliers (fig. 1).
2. If necessary, remove the insole of the shoe and install the cleat washer from the inside of the shoe (fig. 2).
3. Line up the threaded bolt holes of the cleat washer over the double channels inside the sole of the shoe (fig. 3).
4. Place a cleat on the outside of the shoe with the cleat's rough side down for grip. Apply grease to the outside of the cleat in the channel where the bolt washer sits.
5. Insert the bolt washer so that the countersunk holes are facing up. Apply grease to the outside of the bolt washer.
6. Insert bolts with grease and position cleat to desired fit.

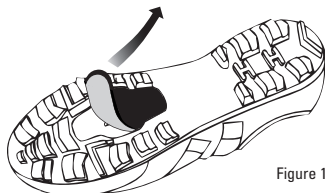


Figure 1

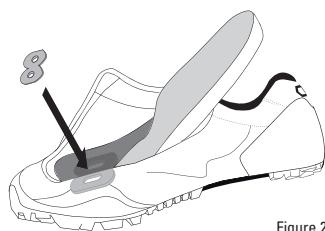


Figure 2



Figure 3

⚠ WARNING: Fully tighten the cleat bolts with a 4mm Allen wrench to 4–5Nm before engaging the cleat into the pedal! If the cleats are not fully tightened, the shoe will be difficult to remove and may cause damage to the shoe. If the cleats are not fully tightened they may not disengage from the pedal, and may cause a crash leading to serious injury or even death.

Always fully tighten the cleat bolts during the initial adjustments. Do not attempt to make adjustments with a loose cleat.

ONGOING MAINTENANCE

To function properly, pedals and cleats must be kept clean. Occasional lubrication of cleat bolts will help prevent rust and seizure. Pedals should be serviced if: rotating pedal emits noise, rotation by hand feels rough, and/or there is play in the bearings.

Periodically check to make sure your pedals are securely tightened to your cranks and your cleats are securely tightened to your cycling shoes.

LIMITED WARRANTY

This iSSi product is warranted against defects in materials and workmanship for three years from the date of retail purchase of the product, subject to the limitations detailed below. Save your dated receipt for proof of purchase.

This warranty does NOT cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the user or assembler
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Damage or deterioration to the paint, surface finish, aesthetics or appearance of the product
- Normal wear and tear
- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly
- Installation of components, parts, or accessories not originally intended use with or compatible with iSSi products

This limited warranty is expressly limited to the repair or replacement of a defective product, at the option of iSSi, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the iSSi product and is not transferable. This warranty applies only to products purchased through an authorized dealer or distributor. In no event shall iSSi be liable for any loss, inconvenience or damage, whether direct, incidental, consequential, or otherwise resulting from breach of any express or implied warranty or condition, of merchantability, fitness for a particular purpose, or otherwise with respect to our products except as set forth herein. This limited warranty gives the consumer specific legal rights, and those rights and other rights may vary from place to place. This limited warranty does not affect your statutory rights.

TO THE EXTENT NOT PROHIBITED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

WARRANTY PROCESS

We will happily back up our products if there is a problem that is our fault. If you and your shop think your iSSi product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.